

 
 


BLE Smart Remote, RSS01

- Wireless smart control by L&E Application “Zense+”
- Bluetooth mesh Protocol, Low power consumption
- Maximum 15m operating range between each nodes
- Fully control function
 - Basic control, On-off, Dim up-down, CCT Tunable
 - 1 Memorable scenario
 - 20 Default dynamic scenes
 - 4 separated zones control


Specification

Model	ZCG2-BT-SR-RSS01-ID-IA
Operation Voltage	3V(1xCR2025 Battery)
Dimmable Range	1-100%
IP Rating	IP20
Cover	Black/ Polycarbonate
Ambient Temperature	0 ~ 40°C
Relative Humidity	8 ~ 80°C
Dimension	136.3x38.9x10.7mm

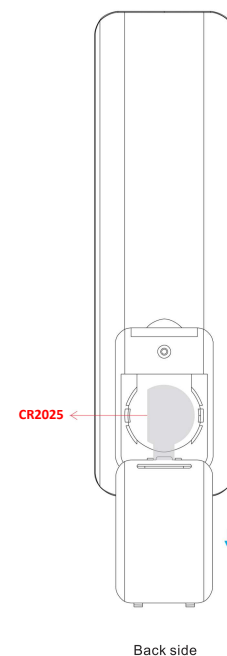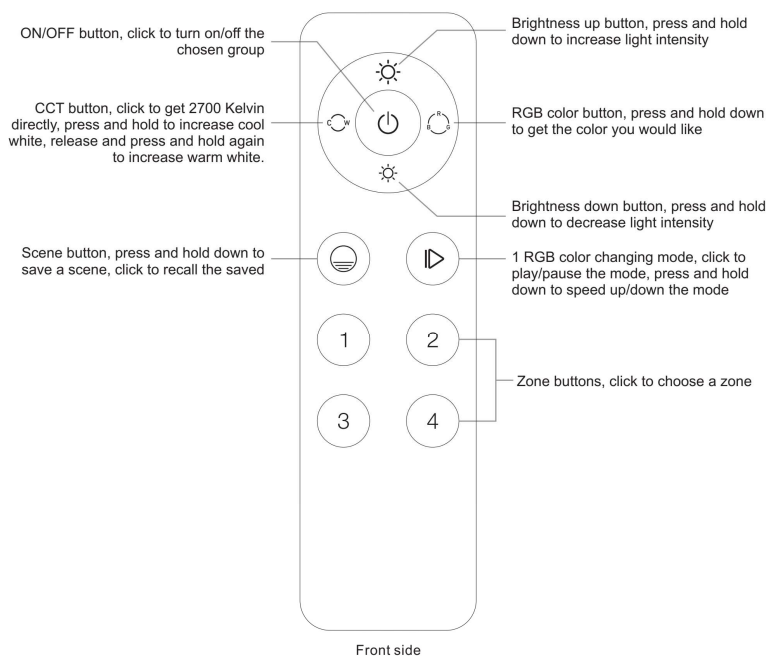


BLE Smart Remote, RSS01

 Dimensions (mm)

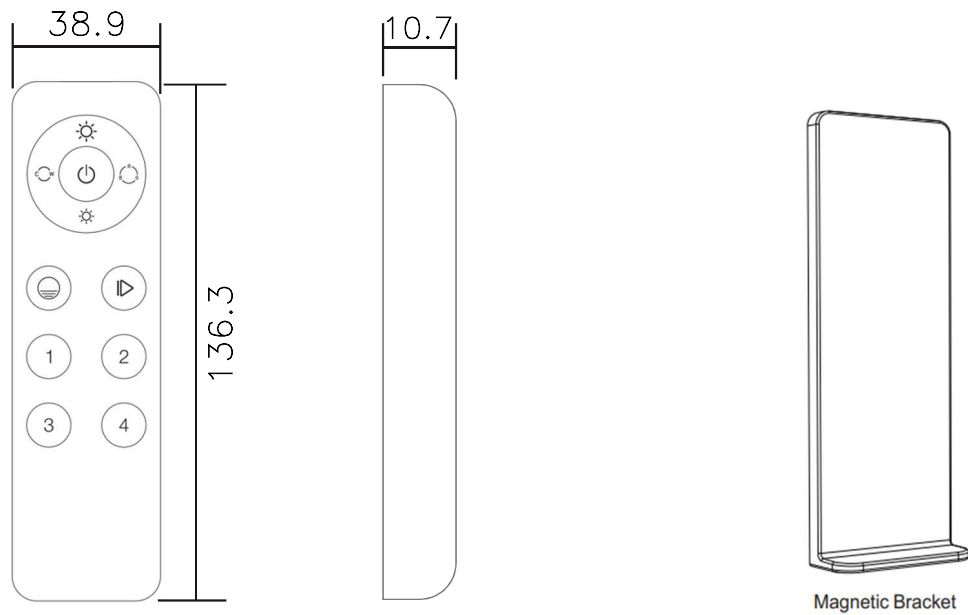


Pairing Step

 
Pair with RF+Bluetooth receiver

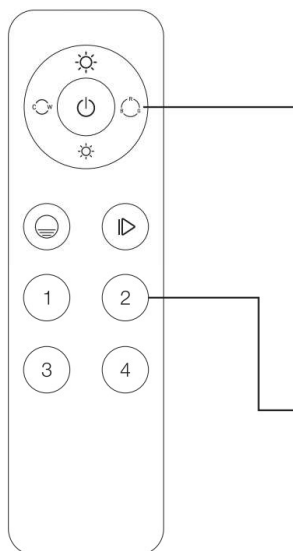

 Step 1: Do wiring the receiver according to wiring diagram (please refer to the instruction of RF receiver that you would like to pair with).

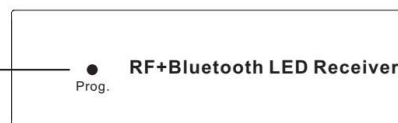

 Step 2: Click the "Prog. Key" or "Reset" button on RF+Bluetooth receiver (or reset power of the receiver 3 times continuously if the button is not accessible) to set it into pairing to RF remote status

Step 4: Then immediately click any other button except zone buttons (e.g. ) , LED lights connected with the receiver flicker once means the receiver is paired with zone 2 successfully.

Step 3: Click a zone button to select a zone (e.g. zone 2).

Note: one receiver can be paired with max 8 remote controls.

If you use multiple receivers, you have two choices:

Option 1: have all the receivers in the same zone, like zone 1

Option 2: have all the receivers in different zones, like zone 1, zone 2, zone 3 and zone 4